 
 
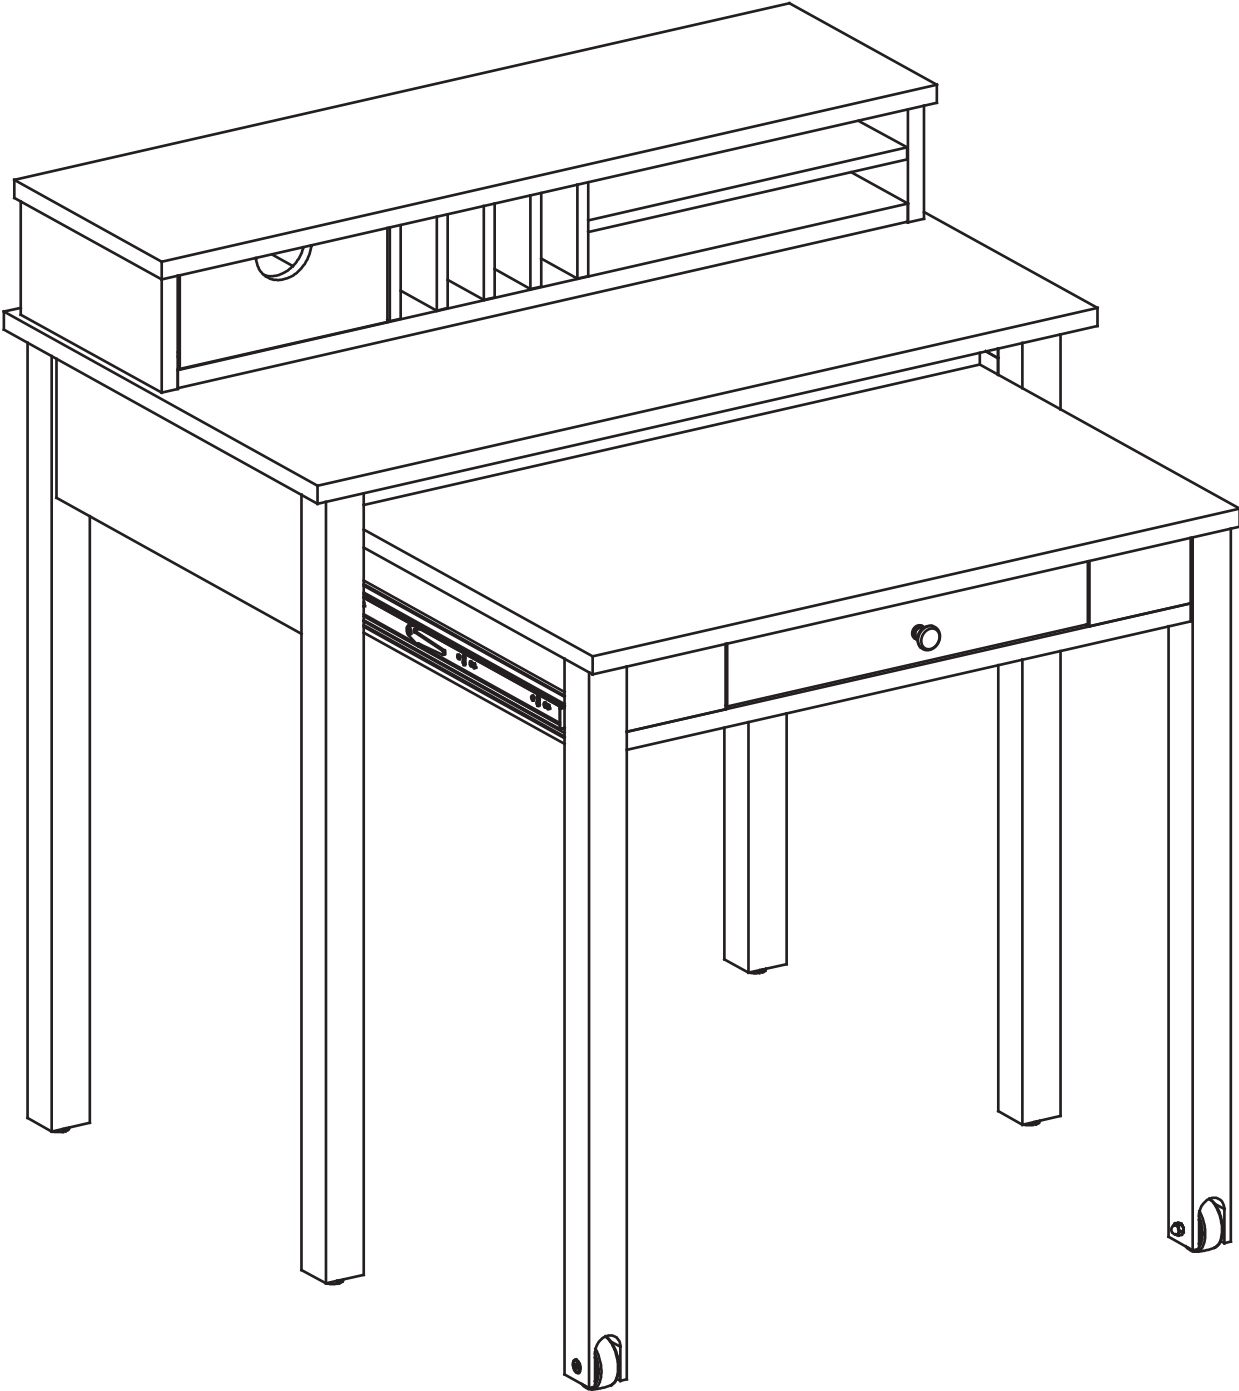 
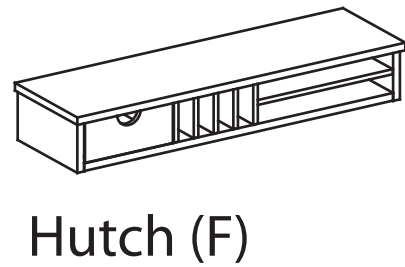 
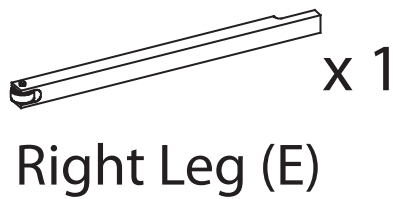 
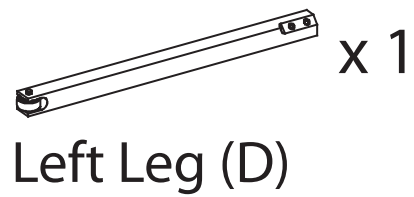 
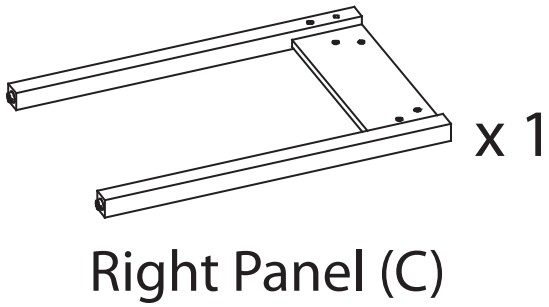 


Roll-Out Desk with Hutch



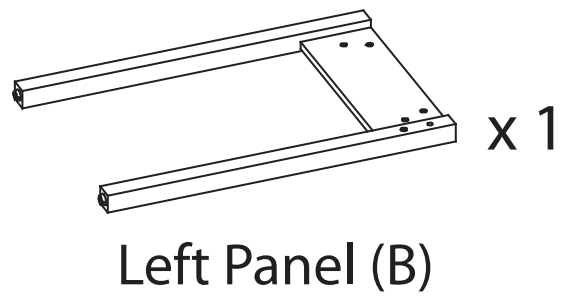



Assembly Instruction Item #525-6X

Parts List

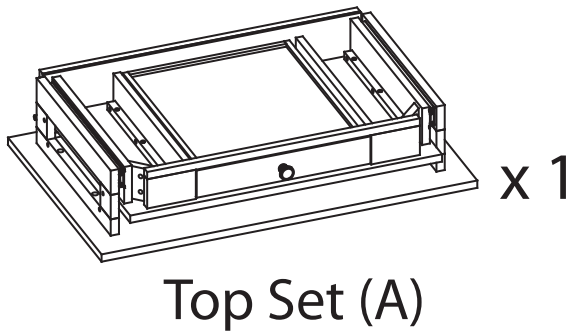


Hardware

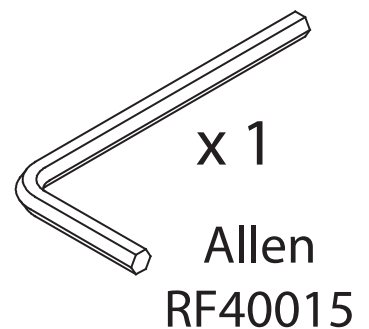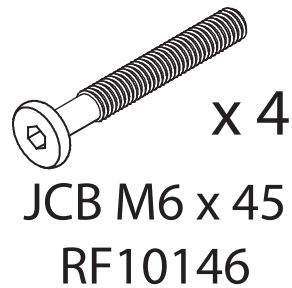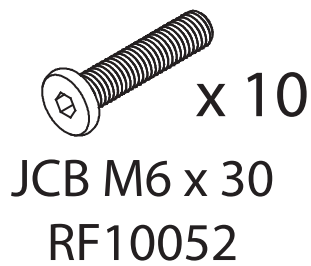

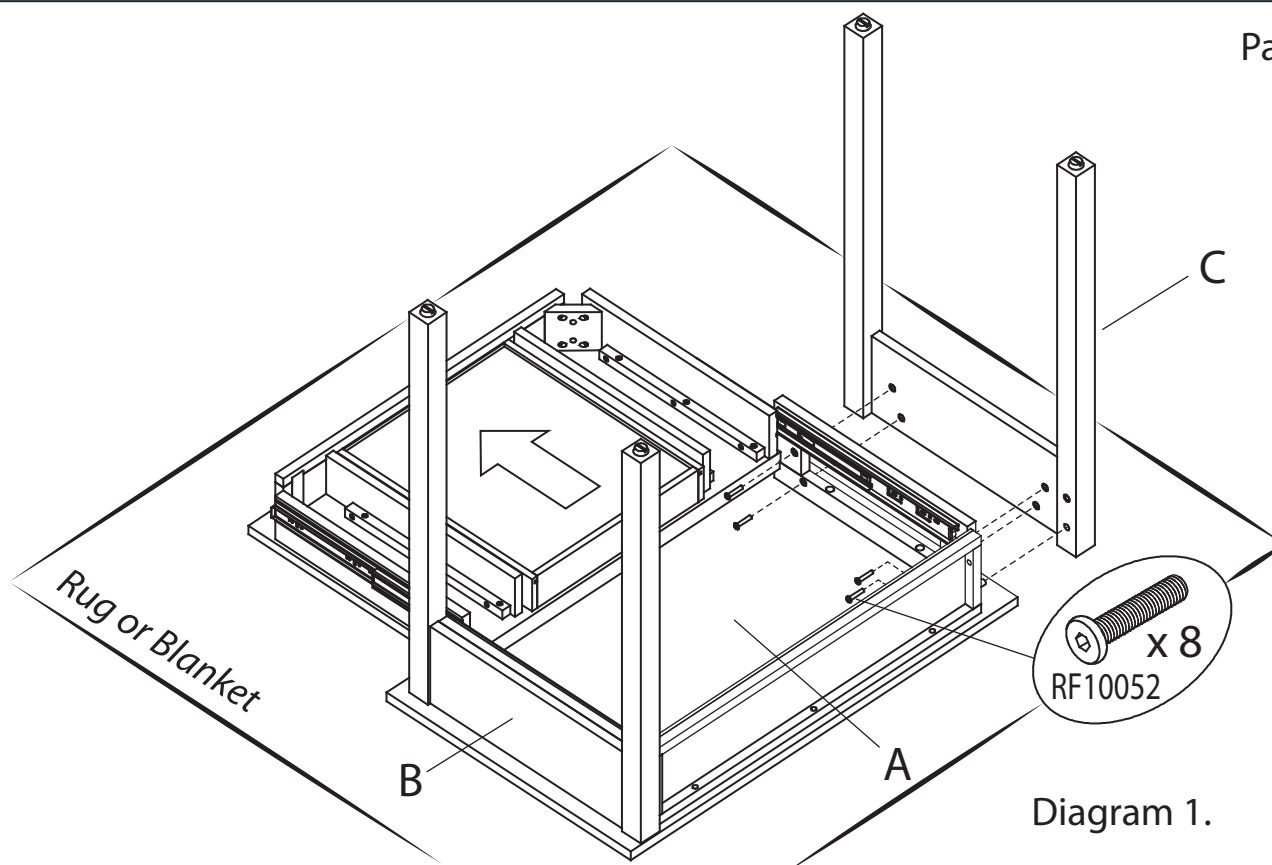

Step 1: Invert the Top Set (A) on a **soft surface** (Rug or Blanket) and slide out the Pull-Out Desk. Then positioning oneself at the rear of the Top Set, attach Left Panel (B) and Right Panel (C) using 8 screws (RF10052) as per Diag.1. Be careful not to put pressure on the extended Pull-Out Desk.

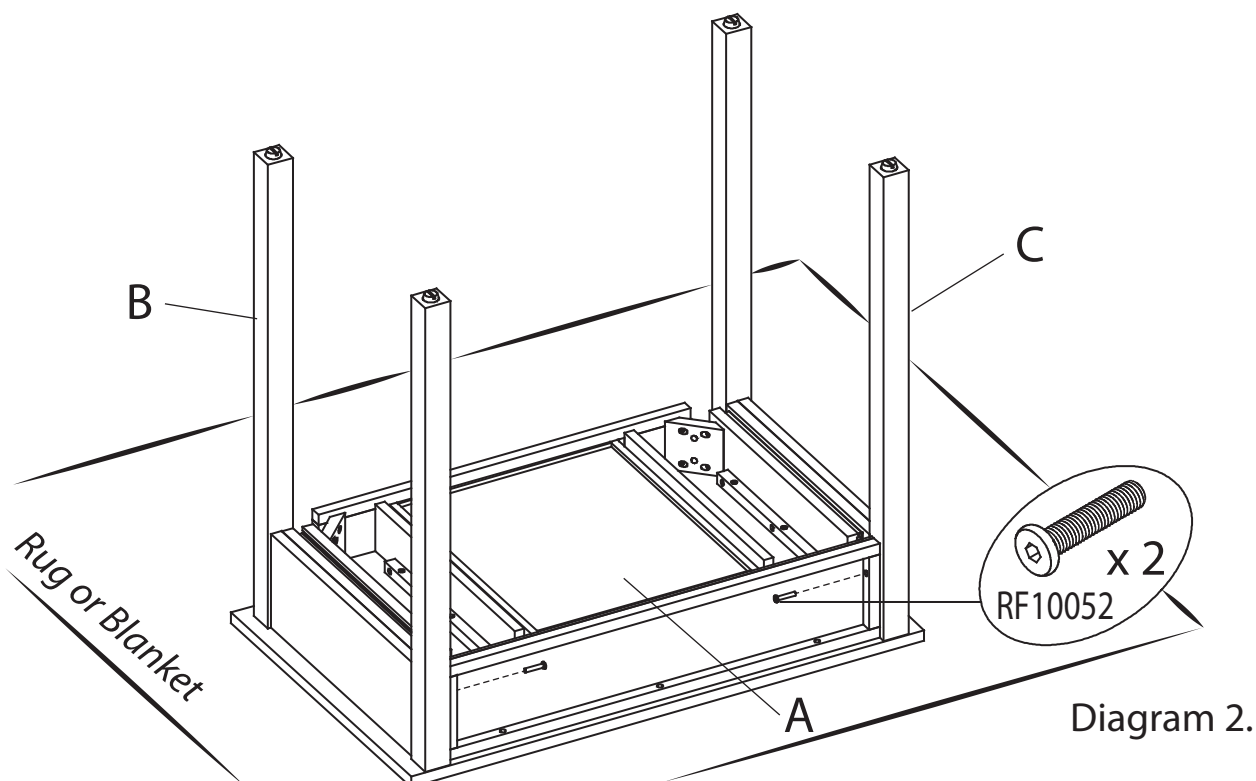

Step 2: Slide Pull-Out Desk back into the Top Set (A). Then attach back panel to both side panels (B&C) with 2 screws (RF10052) as per Diag.2.


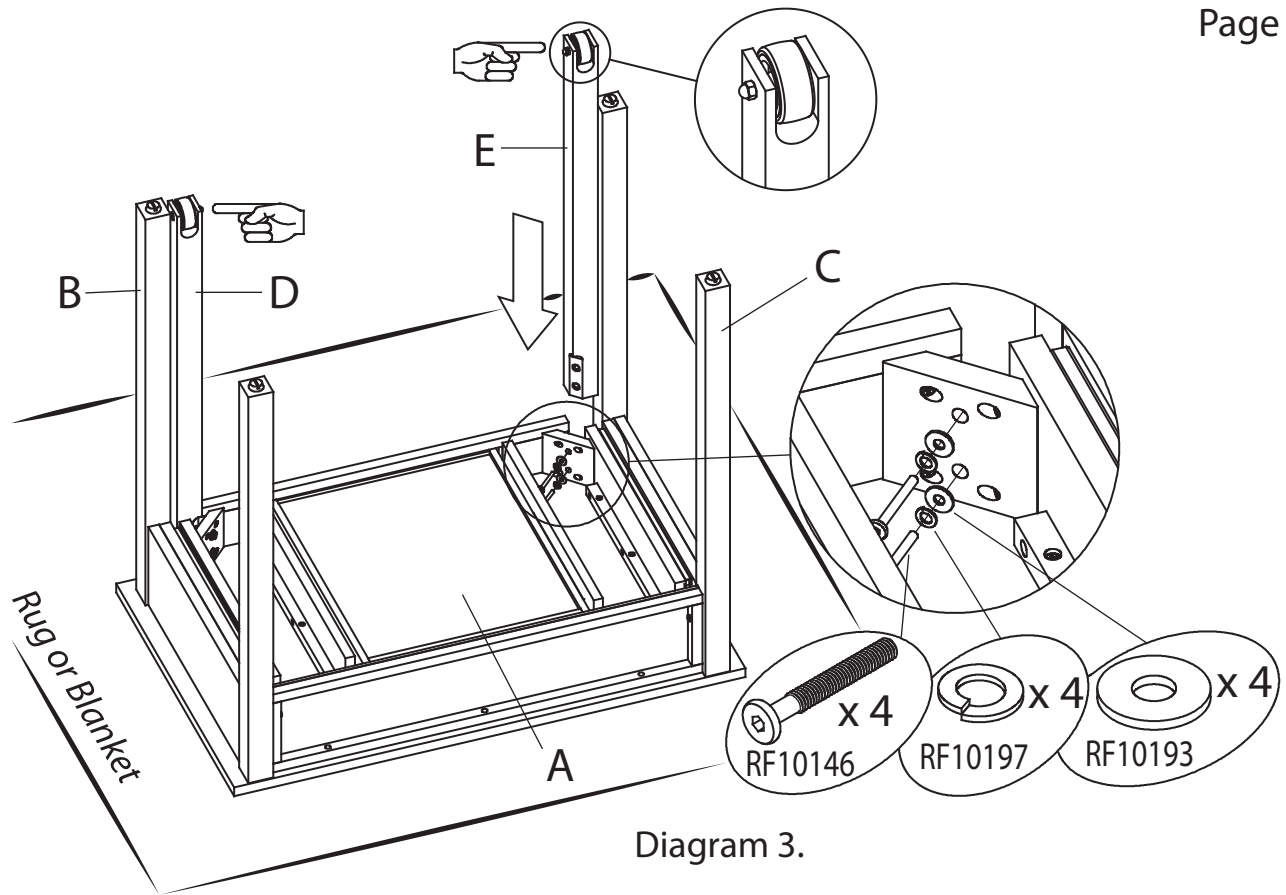


Diagram 3.

Step 3: Attach Left & Right Leg (D&E) into the Pull-Out Desk using 4 screws (RF10146), 4 Spring Washers (RF10197) and 4 Washers (RF10193) as per Diag.3.

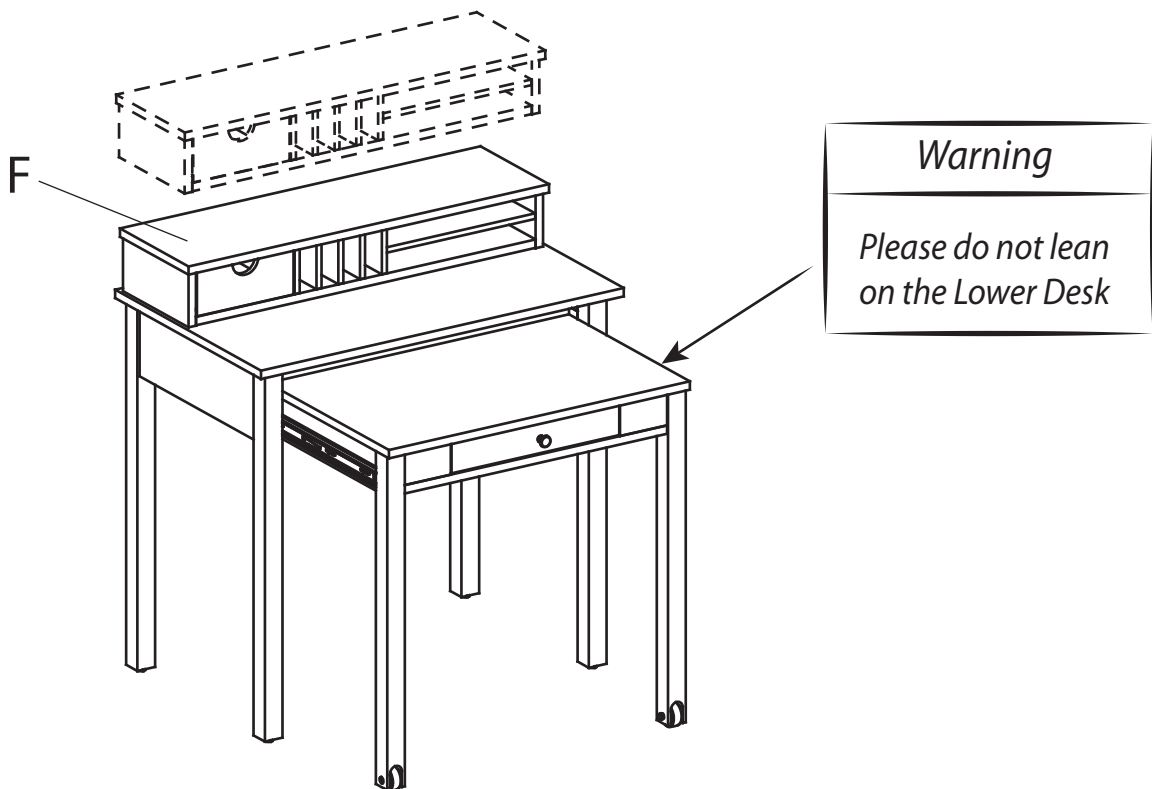

Step 4: Stand the unit upright and place the Hutch (F) on the Desk as per Diag.4.