

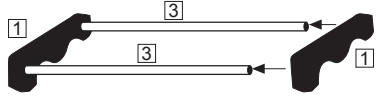
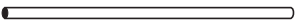

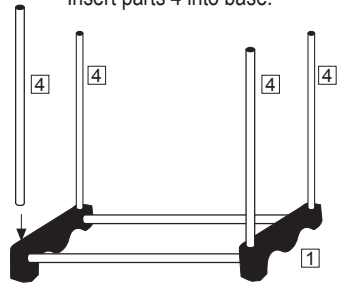


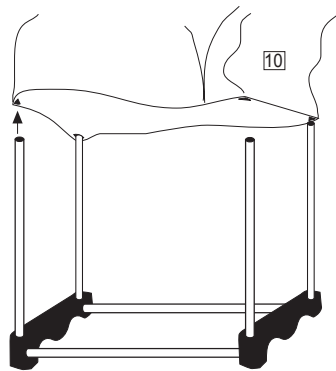

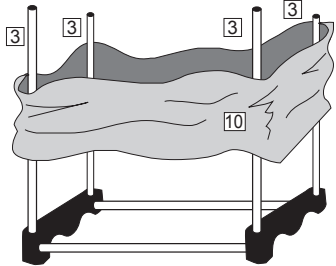


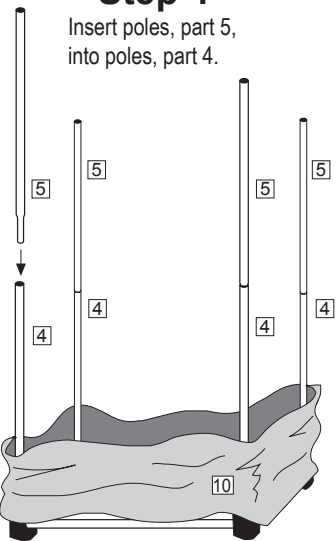


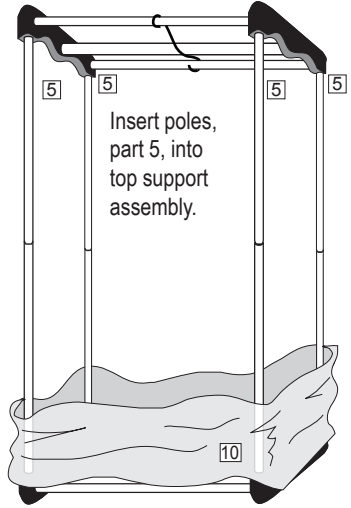
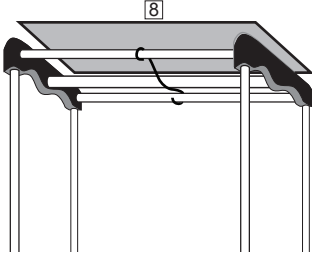
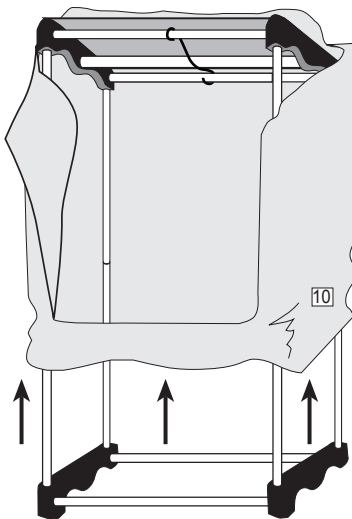


Instructions for Wardrobe 36x20x62"

Parts			
1.	 2 molded bases with inserts for castors	Step 1	Assemble base using parts 3 and 1. Please note that parts 1 have plastic inserts for castors to be inserted in step 9.
2.	 2 molded bases without inserts		
3.	 4 rods 35.75" long	Step 2	Insert parts 4 into base.
4.	 4 rods 29.5" long		
5.	 4 rods with one narrow end 29.5" long	Step 3	Insert tops of poles, part 4, into holes in the bottom of the outer shell, part 10. Make sure all the zippers are open on the shell.
6.	 1 rod 0.75" diameter and 35.75" long		Push the shell completely over poles so that the tops of the poles are clear of the shell through the zippered opening.
7.	1 support wire 		
8.	1 cardboard top piece 	Step 4	Insert poles, part 5, into poles, part 4.
9.	4 castors 		
10.	1 Shell 	Step 5	Assemble top support using parts 2 and 3, closet rod part 6, and wire support part 7.
			
		Step 6	Insert poles, part 5, into top support assembly.
			
		Step 7	Place flat piece of cardboard, part 8, onto top support assembly.
			
		Step 8	The outer shell needs to be up off of the bottom supports as shown, so there is enough cover to fit over the top of the closet. Pull the top of the shell, part 10, over the top assembly and slip the sides down to fit snugly on all corners.
			
		Step 9	Insert castors, part 9, into bases part 1. The castors should snap into place.
		