


# Assembly Guide

## elfa<sup>®</sup> Easy Glider<sup>™</sup> and Mesh Drawer

1

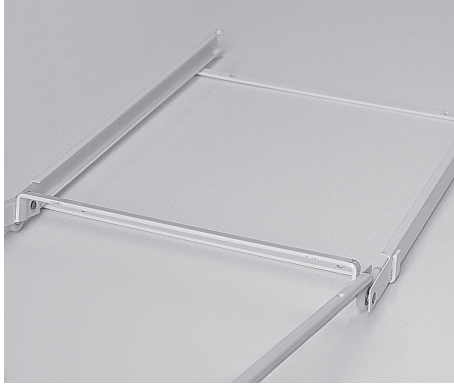


Separate the top frame from the bottom frame.

2




Place the bottom frame with the wheels facing the front edge of the cabinet. Position the Mesh Drawer where you want it. **Note: Make sure that the edge of the drawer is 2"/50mm from the front edge of the cabinet.**

3

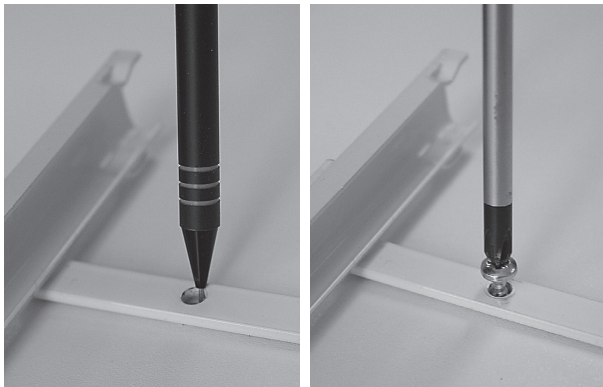

Remove the drawer, mark hole placement and mount the galvanized screws into the cabinet.

4

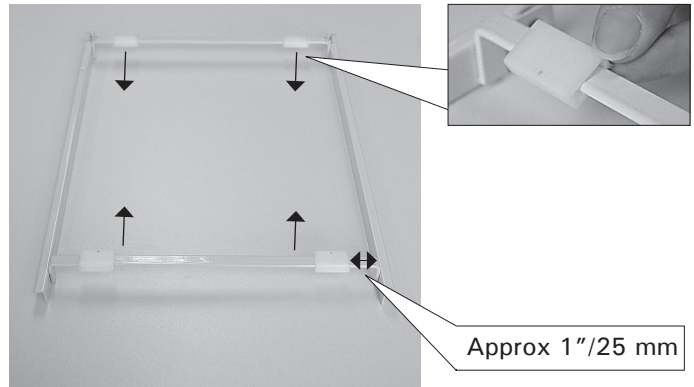

Mount 4 clips on the top frame, with the holes towards the inside. Make sure that the clips are approx. 1"/25 mm from each side. (See arrow above.)

5



Center the Mesh drawer on the top frame. Position the white screws through the drawer into the holes on the clips. Press down the bottom of the drawer as you tighten the screws into the clips. (Adjust the clip to get the holes in the right position if necessary).

6



To install, slide drawer with attached elfa<sup>®</sup> Easy Glider<sup>™</sup> onto the bottom frame.